


C1-1 - Variabile  
 C2-2 - Variabile  
 C2-1 - C2-3 - Comp.  
 C2-2 - C2-4 - Comp.  
 C3 - 2 pf  
 C4 - 5000 pf  
 C5 - 10.000 pf  
 C6 - 370 pf  
 C7 - 2000 pf  
 C8 - 200 pf  
 C10 - 10 mF elettrol. 3 V.  
 C9-1 C9-2 C9-3 - 20 mF  
 C11 - 2 pf  
 C12 - 10.000 pf  
 C13 - 200 pf  
 C14 - 10.000 pf  
 C16 - 10 mF elettrol. 3 V

C17 - 200 pf  
 C18 - 20.000 pf  
 C19 - 5 mF elettrol. 5 V  
 C20 - 1.000 pf  
 C21 - 5 mF elettrol. 6 V  
 C22 - 30 mF elettrol. 3 V  
 C23 - 50.000 pf  
 C25 - 5 pf  
 C27 - 10 pf  
 C28 - 20.000 pf  
 C29 - 10 mF elettrol. 10 V  
 L1 - Bobina di sint. (onde corte)  
 L2 - Bobina di sint. (onde medie)  
 L3 - Bobina oscill. (onde corte)  
 L4 - Bobina oscill. (onde medie)  
 IFT1 - 2-3 - Medie Frequenze  
 T1 - Trasform. d'accopp.

T2 - Trasformatore d'uscita  
 SP - Altoparlante Ø 6 cm.  
 J - Presa per l'auricolare  
 B - Pila da 9 volt  
 R1 - 27000 ohm  
 R2 - 4200 ohm  
 R3 - 2200 ohm  
 R4 - 220 ohm  
 R5 - 100000 ohm  
 R6 - 470 ohm  
 R7 - 820 ohm  
 R8 - 7500 ohm  
 R9 - 22000 ohm  
 R10 - 470 ohm  
 R11 - 5000 ohm (potenz.)

R12 - 2200 ohm  
 R13 - 10000 ohm  
 R14 - 56000 ohm  
 R15 - 820 ohm  
 R16 - 820 ohm  
 R17 - 10000 ohm  
 R18 - 56000 ohm  
 R19 - 5 ohm  
 R20 - 680 ohm  
 R21 - 220 ohm  
 R22 - 6800 ohm  
 R23 - 220 ohm  
 R24 - 22 ohm  
 R25 - 22 ohm  
 R27 - 2200 ohm  
 R28 - 220 ohm

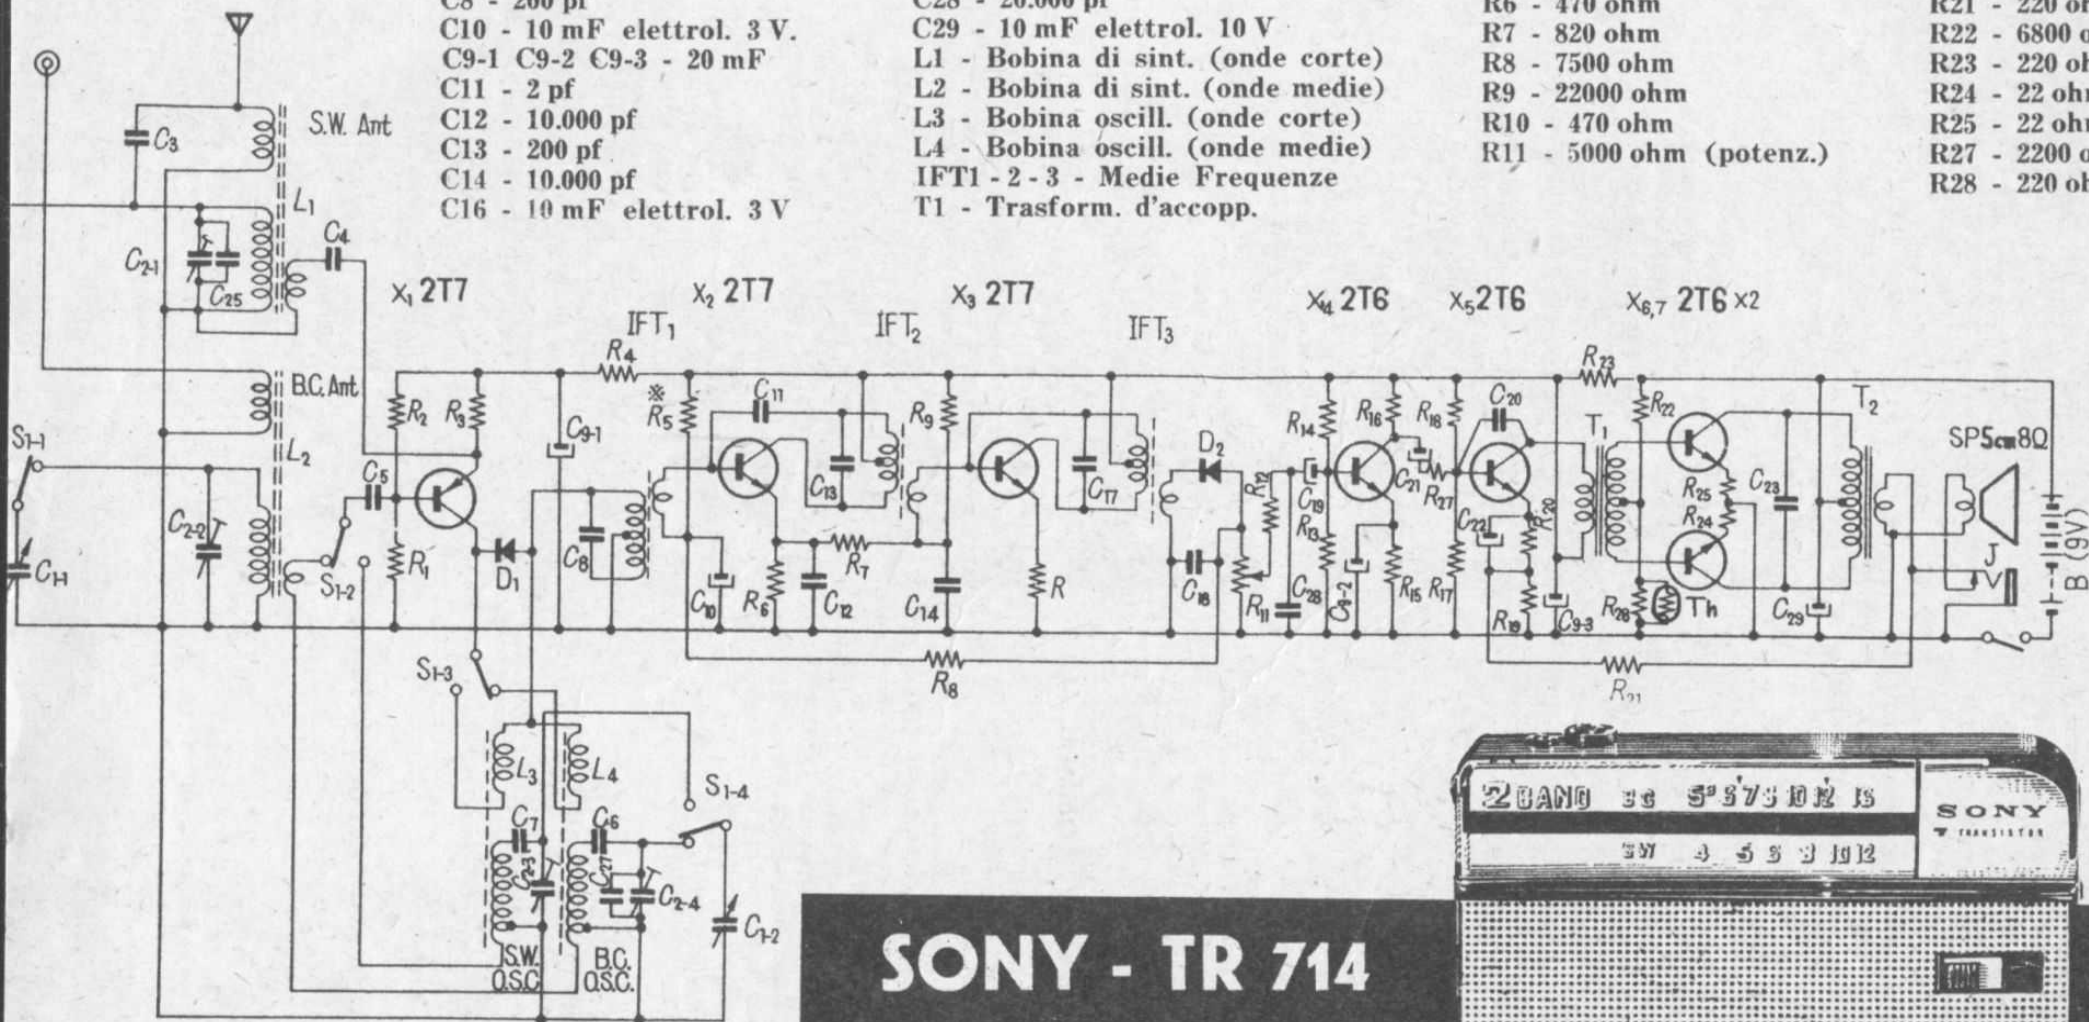

**SONY - TR 714**

